

 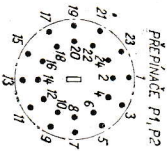



A 10	4, 8, 10, 6, 13, 5	11	2, 22, 1, 32, 19, 30	12, 21	15, 12, 14, 18, 20, 16, 9, 7, 12, 21	31, 22	3	23	24, 14	4, 9	5, 6	16, 23, 15, 17, 18, 7, 8, 28, 19	27	20
C 11	4, 8, 10, 6, 3, 7, 9, 5	11	2, 22, 1, 32, 19, 30	12, 21	15, 12, 14, 18, 20, 16, 9, 7, 12, 21	31, 22	3	23	24, 14	4, 9	5, 6	16, 23, 15, 17, 18, 7, 8, 28, 19	27	20
L 11	4, 8, 10, 6, 3, 7, 9, 5	11	2, 22, 1, 32, 19, 30	12, 21	15, 12, 14, 18, 20, 16, 9, 7, 12, 21	31, 22	3	23	24, 14	4, 9	5, 6	16, 23, 15, 17, 18, 7, 8, 28, 19	27	20

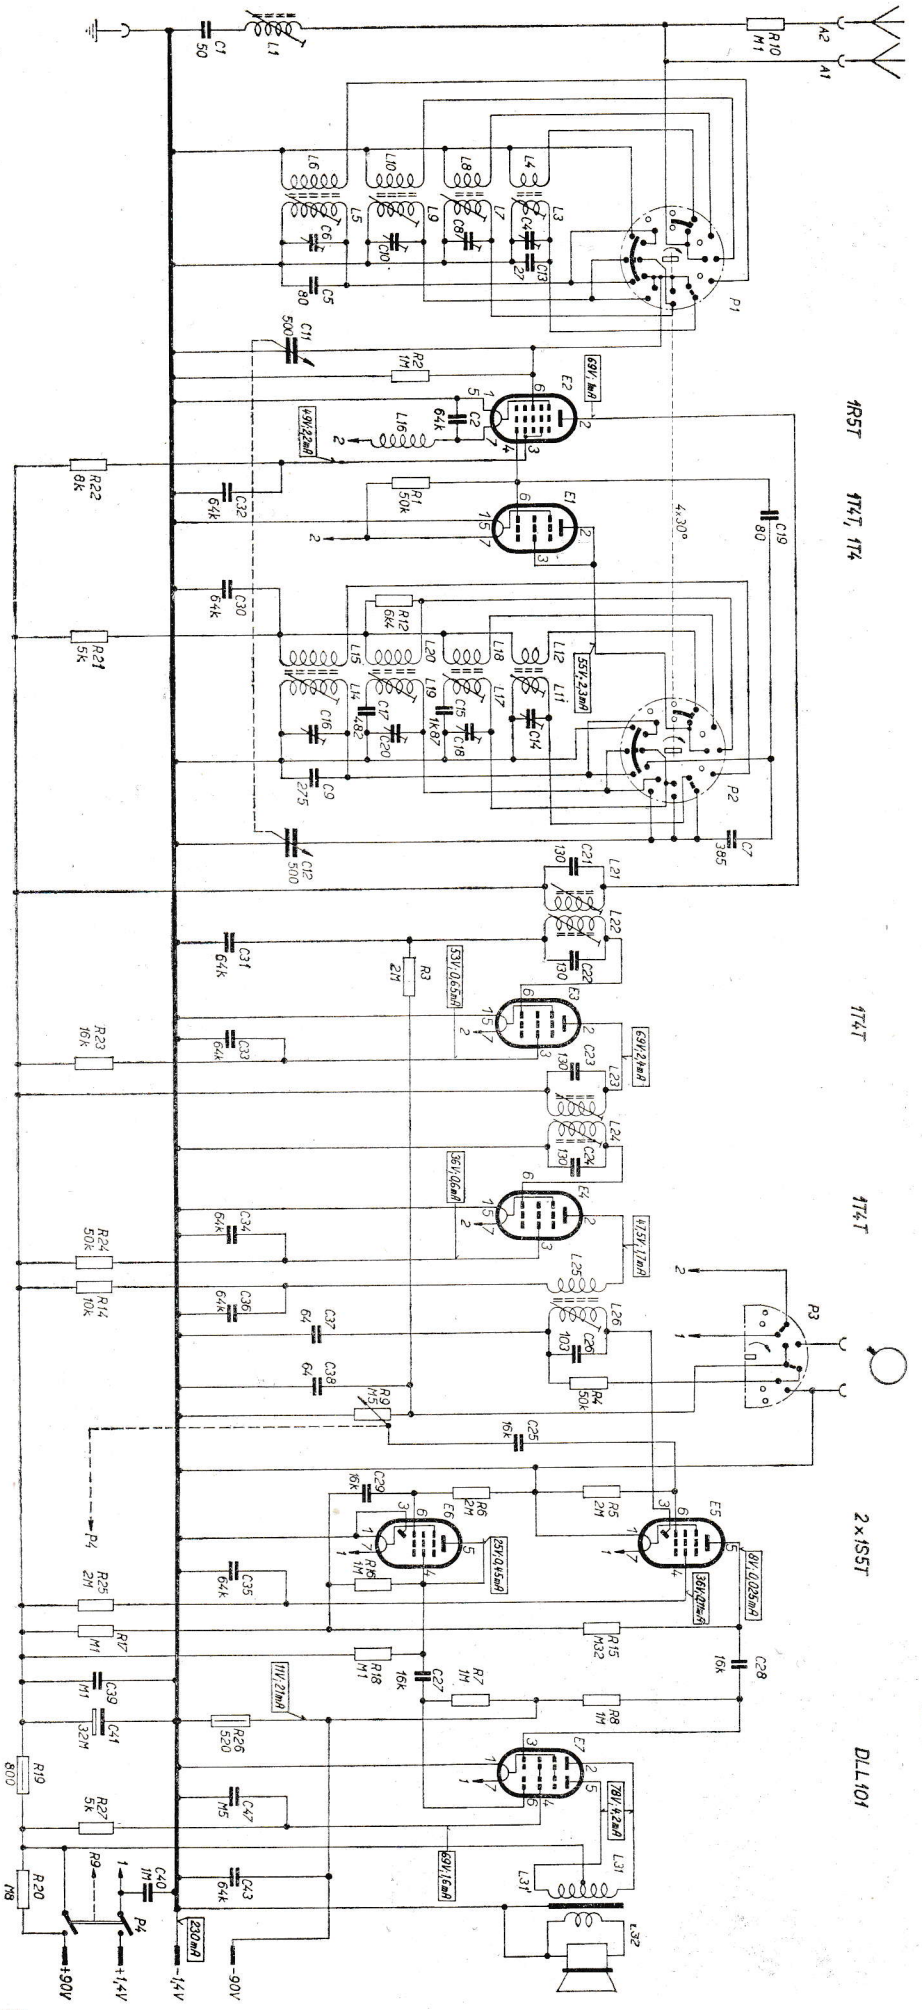

ROZSAH	SPJENÉ DOTYKY P1	SPJENÉ DOTYKY P2
KV 1	5-6, 11-13-14-15, 21-22	5-6, 11-13-14-15, 21-22
KV 2	7-8, 13-15-16, 22-23	7-8, 13-15-16, 22-23
SV	9-10, 15-18	1-2, 9-10, 15-18
DV	11-12	2-3, 11-12



POLUHA	SPJENÉ DOTYKY P3
RA10	1-2, 5-6
0	3-4, 7-8

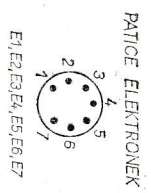

EV, E2, E3, E4, E5, E6, E7
1-2, 3-4, 5-6, 7-8

Zapojení rozhlasového přijímače 508B-2